



Diagnostic connector location – Land Rover

Vehicle:	Connector Type:	Part Number:	Connector location:
Freelander	16 pin	CAN1	Passenger side of centre console, sometimes driver's side near floor.
Range Rover	16 pin	CAN1	Passenger foot well at side of centre console. Mounted vertically.
Discovery Series II	16 pin	CAN1	Drivers side of centre console centrally below steering wheel.
Discovery Series I	5 pin 14-CUX	A0903121-1	Behind trim panel in front of driver's door.
Discovery Series I	3 pin Electronic EGR	A0903111-1	Behind trim panel in front of driver's door.
Discovery Series I	3 pin MEMS MPi	A0903111-1	Engine bay next to ECU.
Discovery Series I	5 pin (blue) ABS	A0904121-1	Behind trim panel in front of driver's door.
Discovery Series I	4 pin Airbag	A0903121-1	Below steering wheel behind trim panel
Discovery Series I	16 pin	A0901121-1	Drivers side of centre console above pedals.
Range Rover Classic	5 pin 14-CUX	A0903121-1	Behind trim panel in front of driver's door. Or at rear of driver's seat.
Range Rover Classic	5 pin Air Suspension	A0903121-1	Under Driver's seat.
Range Rover Classic	4 pin Airbag	A0903121-1	Below steering wheel behind trim panel.
Range Rover Classic	5 pin (blue) ABS	A0904121-1	Under passenger seat at front of seat.
Defender	16 pin	CAN1	Front face of middle seat.
Defender	3 pin Electronic EGR	A0903111-1	Engine bay next to ECU.
Defender	5 pin 14-CUX	A0903121-1	Engine bay next to ECU.