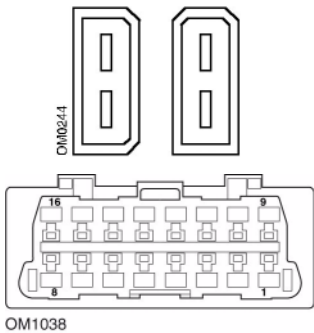


Diagnostic Connector Locations

<p>VW</p>	<p>Bora - Centre console. Corrado, Passat - Dashboard - Centre. Golf, Vento - Dashboard - Centre (remove ashtray). Lupo - Centre console, Storage compartment or Front ashtray. Polo - Dashboard - RH. Sharan - Under gear lever cover. Transporter - Adjacent to instrument panel or Fuse/relay box - Fascia. <i>NOTE: For more information, refer to the relevant technical manual.</i></p>	<p>2-pin ISO 9141 or J1962</p>	 <p>The diagram illustrates the physical layout of diagnostic connectors. At the top, two vertical 2-pin connectors are shown, each with two rectangular pins. The left one is labeled 'OM02/4'. Below them is a larger, horizontal 16-pin connector labeled 'OM1038'. This connector has two rows of eight pins each. The top row is numbered 16, 15, 14, 13, 12, 11, 10, 9 from left to right. The bottom row is numbered 8, 7, 6, 5, 4, 3, 2, 1 from left to right.</p>
------------------	---	--	--